



XMISSION
VIDEO *Powered and Licensed by UTOPIA*

QUICK REFERENCE GUIDE



WELCOME

Welcome to XMission Video, powered and licensed by UTOPIA.
Enclosed is the information you will require most often.

INCLUDED IN THIS GUIDE:

pg 3: XMission's Channel Lineup

pg 8: Remote Control Layout

pg 9: Remote Control Functions

pg 12: PVR Functions

pg 15: Remote Control Codes (program your remote for your home electronics)

If you require additional information—including programming guide information, PVR instruction, and setting parental controls—please visit:

xmission.com/support/videoguide.pdf

Please feel free to contact us at any time if you have questions. We appreciate having you as our customer and hope that you enjoy your service.

www.xmission.com

Toll-Free: 877-964-7746 Local: 801-539-0852

51 East 400 South Suite 200

Salt Lake City, Utah 84111

CHANNEL LISTING BY NUMBER

1	UTOPIA Info
2	KUTV-CBS
4	KTVX-ABC
5	KSL-NBC
7	KUED-PBS
8	KUED2-PBS World (7.2)
9	KUEN-PBS
10	KEJT-Telemundo
11	KBYU-PBS
12	BYU TV
13	KSTU-FOX
14	KJZZ
15	KUCW-CW
16	IONLife
17	IONM (16.3)
18	KSL3-Weatherscan (5.3)
20	KTMW-TV
21	KEJT-3 Weather
23	Weather Channel
24	KPNZ-Z24
26	TBN
30	KUCW DT
31	ESPN
32	ESPN Classic
33	ESPNNews
34	ESPN U
35	ESPN2
36	ESPN Deportes
37	NFL Network
39	The MTN
40	Versus
42	CBS Sports
44	Fox College Sports Atlantic
45	Fox College Sports Central
46	Fox College Sports Pacific
47	Speed Channel
48	Fuel TV

LOCAL
SPORTS

49	The Golf Channel
50	Untamed (4.2)
53	Universal Sports
55	CNN
56	CNN Headline News
57	CNN International
58	Fox News Channel
59	Fox Business Channel
60	MSNBC
61	CNBC
62	CNBC World
63	ABC News Now
70	Nick Jr.
71	Nickelodeon
72	Nick
75	Disney
80	Cartoon Network
81	TOON
83	Qubo (16.2)
89	ABC Family
90	TNT
92	TBS
94	USA Network
97	FX
100	Comedy Central
102	SyFy
104	E! Entertainment
105	Spike TV
107	G4
110	BBC World
111	BBC America
112	TV Land
114	A&E (W)
115	A&E (E)
116	BET
122	Chiller
123	Sleuth
124	Bravo

NEWS
KIDS
POPULAR CABLE

125	Oxygen
126	SOAPnet
128	KUTV-2 This (2.2)
130	Hallmark
131	Lifetime Television
133	Lifetime Real Women
134	Lifetime Movie Network
138	Fox Movies
139	Fox Reality Channel
141	Turner Classic Movies
142	TRUTVP
143	TRUTV
149	THEN
151	KBYU-DT Create (11.4)
153	KUEN-DT
160	Discovery Kids
161	Animal Planet
163	Discovery
165	Discovery Health
169	Food Network (W)
170	Food Network (E)
171	TLC
173	HGTV
177	Travel Channel
179	National Geographic
180	Fine Living
181	DIY Network
182	Style
183	Military Channel
184	Military History
185	Science Channel
188	FitTV
189	Investigation Discovery
190	Planet Green
191	Biography Channel
192	Crime & Investigation
193	The History Channel (W)
194	The History Channel (E)

POPULAR CABLE
EDUCATIONAL/INSTRUCTIONAL



195	History International	MUSIC
200	MTV	
202	MTV2	
208	VH1	
212	CMT	
215	Great American Country	
216	WRSHF	SPANISH
222	BYU International (11.3)	
225	History en Espanol	
227	Discovery Familia	
228	Discovery en Espanol	
230	Mun2	
234	Telemundo	PUBLIC TV
238	KUED3-V-me (7.3)	
245	Mhz-Worldview (9.2)	
247	ShopNBC	
250	C-SPAN	
251	C-SPAN2	
252	C-SPAN3	
261	Eternal Word Television	
302	KUTV-HD	
304	KTVX-HD	
305	KSL-HD	HD
311	KBYU-HD	
313	KSTU-HD	
314	KJZZ-HD	
320	ESPN-HD	
321	ESPNNews HD	
323	ESPN2 HD	
324	NFL Network HD	
325	Versus/Golf HD	
328	FSN Rocky HD	
332	CNN HD	
333	CNN Headline News HD	
340	Disney HD	
341	Disney XD HD	
349	ABC Family HD	
350	TNT HD	

351	TBS HD	HD
352	SyFy HD	
353	A&E HD	
355	Universal HD	
362	USA Network HD	
363	Lifetime Movies HD	
369	National Geographic HD	
370	Discovery Channel HD	
371	HD Theater	
372	Discovery Planet Green HD	
373	Animal Planet HD	UTOPIA/CITY
374	The Learning Channel HD	
375	Science Channel HD	
376	HGTV HD	
377	The Food Channel HD	
384	Palladia HD	
400	UTOPIA Channel	
401	BCTV	
402	Provo City	
403	Park City TV	
404	West Valley City	EXPANDED CHANNELS
405	Murray	
406	Midvale	
51	Outdoor Channel	
52	Fox Soccer Channel	
74	Nicktoons Network	
77	Disney XD	
82	Boomerang	
87	The N	
118	BET Gospel	
119	BET J	
197	Wealth TV	
204	MTV Hits	
205	MTV Jams	
210	VH1 Classic Rock	
211	VH1 Soul	
214	CMT Pure Country	

233	MTV Tres	PREMIUM CHANNELS
236	CNN Espanol	
265	RFDTV	
390	HBO HD	
391	Showtime HD	
392	Cinemax HD	
393	TMC HD	
394	Starz HD	
395	Starz Kids HD	
500	Starz	
501	Starz	
502	Starz Cinema	
503	Starz Cinema	
504	Starz Comedy	
505	Starz Edge	
506	Starz InBlack	
507	Starz Kids & Family	
508	Starz Kids & Family	
509	Encore	
510	Encore	
511	Encore Action	
512	Encore Action	
513	Encore Drama	
514	Encore Love	
515	Encore Mystery	
516	Encore WAM	
517	Encore WAM	
518	Encore Westerns	
520	Showtime	
521	Showtime	
522	Showtime Too	
523	Showtime Too	
524	Showtime Beyond	
525	Showtime Beyond	
526	Showtime Extreme	
527	Showtime Extreme	
528	Showtime Family	

529	Showtime Family
530	Showtime Next
531	Showtime Next
532	Showtime Showcase
533	Showtime Showcase
534	Showtime Women
535	Showtime Women
536	TMC
537	TMC
538	TMC Xtra
539	TMC Xtra
540	Flix
541	Flix
550	HBO
551	HBO
552	HBO2
553	HBO2
554	HBO Family
555	HBO Family
556	HBO Signature
557	HBO Signature
558	HBO Comedy
559	HBO Zone
570	Cinemax
571	Cinemax
572	More Max
573	More Max
574	Action Max
575	Thriller Max
680	KBYUDT
685	KSTUDT
900	KEJT-S
575	Thriller Max
680	KBYUDT
685	KSTUDT
900	KEJT-S

PREMIUM CHANNELS
CHANNEL LISTING BY NAME

A&E (E)	115
A&E (W)	114
A&E HD	353
ABC Family	89
ABC Family HD	349
ABC News Now	63
Action Max	574
Animal Planet	161
Animal Planet HD	373
BBC America	111
BBC World	110
BCTV	401
BET	116
BET Gospel	118
BET J	119
Biography Channel	191
Boomerang	82
Bravo	124
BYU International (11.3)	222
C-SPAN	250
C-SPAN2	251
C-SPAN3	252
Cartoon Network	80
CBS Sports	42
Chiller	122
Cinemax	570
Cinemax	571
Cinemax HD	392
CMT	212
CMT Pure Country	214
CNBC	61
CNBC World	62
CNN	55
CNN Espanol	236
CNN HD	332
CNN Headline News	56
CNN Headline News HD	333

CNN International	57
Comedy Central	100
Crime & Investigation	192
Discovery	163
Discovery Channel HD	370
Discovery en Espanol	228
Discovery Familia	227
Discovery Health	165
Discovery Kids	160
Discovery Planet Green HD	372
Disney	75
Disney HD	340
Disney XD	77
Disney XD HD	341
DIY Network	181
E! Entertainment	104
Encore	509
Encore	510
Encore Action	511
Encore Action	512
Encore Drama	513
Encore Love	514
Encore Mystery	515
Encore WAM	516
Encore WAM	517
Encore Westerns	518
ESPN	31
ESPN Classic	32
ESPN Deportes	36
ESPN U	34
ESPN-HD	320
ESPN2	35
ESPN2 HD	323
ESPNNews	33
ESPNNews HD	321
Eternal Word Television	261
Fine Living	180
FitTV	188



Flix	540
Flix	541
Food Network (E)	170
Food Network (W)	169
Fox Business Channel	59
Fox College Sports Atlantic	44
Fox College Sports Central	45
Fox College Sports Pacific	46
Fox Movies	138
Fox News Channel	58
Fox Reality Channel	139
Fox Soccer Channel	52
FSN Rocky HD	328
Fuel TV	48
FX	97
G4	107
Great American Country	215
Hallmark	130
HBO	550
HBO	551
HBO Comedy	558
HBO Family	554
HBO Family	555
HBO HD	390
HBO Signature	556
HBO Signature	557
HBO Zone	559
HBO2	552
HBO2	553
HD Theater	371
HGTV	173
HGTV HD	376
History en Espanol	225
History International	195
Investigation Discovery	189
IONLife	16
IONM (16.3)	17
KBYU-DT Create (11.4)	151

KBYU-HD	311
KBYU-PBS	11
KBYUDT	680
KEJT-3 Weather	21
KEJT-S	900
KEJT-Telemundo	10
KJZZ	14
KJZZ-HD	314
KPNZ-Z24	24
KSL-HD	305
KSL-NBC	5
KSL3-Weatherscan (5.3)	18
KSTU-FOX	13
KSTU-HD	313
KSTUDT	685
KTMW-TV	20
KTVX-ABC	4
KTVX-HD	304
KUCW-CW	15
KUED-PBS	7
KUED2-PBS World (7.2)	8
KUED3-V-me (7.3)	238
KUEN-DT	153
KUEN-PBS	9
KUTV-2 This (2.2)	128
KUTV-CBS	2
KUTV-HD	302
Lifetime Movie Network	134
Lifetime Movies HD	363
Lifetime Real Women	133
Lifetime Television	131
Mhz-Worldview (9.2)	245
Midvale	406
Military Channel	183
Military History	184
More Max	572
More Max	573
MSNBC	60

MTV	200
MTV Hits	204
MTV Jams	205
MTV Tres	233
MTV2	202
Mun2	230
Murray	405
National Geographic	179
National Geographic HD	369
NFL Network	37
NFL Network HD	324
Nick	72
Nick Jr.	70
Nickelodeon	71
Nicktoons Network	74
Outdoor Channel	51
Palladia HD	384
Park City TV	403
Planet Green	190
Provo City	402
Qubo (16.2)	83
RFDTV	265
Science Channel	185
Science Channel HD	375
ShopNBC	247
Showtime	520
Showtime	521
Showtime Beyond	524
Showtime Beyond	525
Showtime Extreme	526
Showtime Extreme	527
Showtime Family	528
Showtime Family	529
Showtime HD	391
Showtime Next	530
Showtime Next	531
Showtime Showcase	532
Showtime Showcase	533



Showtime Too	522	TMC HD	393
Showtime Too	523	TMC Xtra	538
Showtime Women	534	TMC Xtra	539
Showtime Women	535	TNT	90
Sleuth	123	TNT HD	350
SOAPnet	126	TOON	81
Speed Channel	47	Travel Channel	177
Spike TV	105	TRUTV	143
Starz	500	TRUTVP	142
Starz	501	Turner Classic Movies	141
Starz Cinema	502	TV Land	112
Starz Cinema	503	Universal HD	355
Starz Comedy	504	Universal Sports	53
Starz Edge	505	Untamed (4.2)	50
Starz HD	394	USA Network	94
Starz InBlack	506	USA Network HD	362
Starz Kids & Family	507	UTOPIA Channel	400
Starz Kids & Family	508	UTOPIA Info	1
Starz Kids HD	395	Versus	40
Style	182	Versus/Golf HD	325
SyFy	102	VH1	208
SyFy HD	352	VH1 Classic Rock	210
TBN	26	VH1 Soul	211
TBS	92	Wealth TV	197
TBS HD	351	Weather Channel	23
Telemundo	234	West Valley City	404
The Food Channel HD	377	WRSHP	216
The Golf Channel	49		
The History Channel (E)	194		
The History Channel (W)	193		
The Learning Channel HD	374		
The MTN	39		
The N	87		
THEN	149		
Thriller Max	575		
TLC	171		
TMC	536		
TMC	537		



Device Selection

Send commands to up to five devices

RCU Setup

Remote Control setup

DVR List

List of recorded programs

Back Arrow

Move back in recording 1 minute

Arrow Controls

DVR playback controls

Menu

Display the Main Menu

Direction Buttons

Move the highlight in system screens

Guide

Displays Channel Guide

Programmable Buttons

Used in some menus

Vol +/-

Adjusts volume

Mute

Turns sound on or off

Number Keys

Select a channel

Swap

Switch picture-in-picture and regular channel

PIP

Turn on or off picture-in-picture

Input

Switch between TV and Video input

Phone

Not currently available

View Live TV

View Live TV

Jump forward

Move forward in recording 30 seconds

Record

Record current program

Info

Displays Info Bar

Exit

Exit Menu or Guide screen

PG +/- and Day +/-

Change Days or Pages within Channel Guide

Ch +/-

Change channels

VOD

Not currently available

Network

Not currently available

Last

Return to previous channel

Keyboard

or On-screen keyboard (not currently available)

Move

Move picture-in-picture

Closed Captioning

Turn on or off closed captioning

SAP

Turn on or off alternative language audio

WWW

Not currently available



Turn Your Set Top Box or TV On or Off

The device selection buttons tell your remote whether you want to control your set top box or your television. To turn your set top box on or off, press the CBL button. Press the Power button on your remote control. To turn your TV on or off, press the TV button. Press the Power button on your remote control.

Note: Your remote control must have the remote code programmed in before it can send the correct signals for your TV. If the list of TV brand codes was not included in your installation pack, please contact customer service.

If pressing Power turned the wrong device on or off, press the Power button again, press the appropriate device selection button (CBL or TV) and press Power once more.

Change Channels

The **CH +/-** button will change channels up or down one at a time.

The **Page Up/Page Down** buttons will change channels up or down one at a time.

The **Number Pad** can be used to directly enter a channel number.

The **LAST** button will return you to the previous channel you were watching.

GUIDE will display the program guide.

Adjust Volume

The **VOL +/-** button will adjust the volume gradually.

The **Mute** button will toggle the sound on and off.

System Buttons

There are a number of buttons on your remote that display different features of your service.

MENU displays the MenuBar. The MenuBar provides quick access to every feature supported by your service. For more information about the MenuBar, see page 9. **INFO** displays the InfoBar, a feature that lets you see information on what you're watching, what's coming on next, and what's on other channels.

For more information on the InfoBar, see page 6. **EXIT** causes your set top box to exit whatever screen you are seeing and return you to normal TV viewing. If you ever get lost on a screen, it is always safe to press EXIT and then start over.

Programming your ADB Remote Control

Your remote control can handle several devices. However, first you have to set up your remote control for your equipment. You can do it in one of the following ways:

Brand Setup: First, find the manufacturer of your equipment on the Brand Codes list. If the manufacturer's brand is not listed, go to Automatic Search "below". To set up your remote control follow these steps:

1. Turn the device on.
2. Press "TV/AUD/DVD/AUX/STB" depending on what mode you want to handle and then hold "RCU Setup" until the device key blinks twice.
3. Enter one of the codes from the list. If the code was correct the mode key blinks twice. If not, the key emits one long blink. Then you will have to repeat steps 2 and 3 until entering the correct code.
4. Press "Power". If the device has turned off, you have chosen the right code. If none of the codes work, try Automatic Search.

Automatic Search: Automatic Search should only be undertaken if none of the brand codes works or your brand name is not listed. Use the Automatic Search option. 1. Switch on the device. Then press appropriate mode key, for example "TV" if you want to set up a TV.

2. Press and hold the "RCU Setup" until the mode key blinks twice.



3. Press "9" "9" "1" The mode key blinks twice.
4. Aim the remote at the device and press "Power"
5. Press "+ CH " / "CH -" repeatedly until the device is switched off.
6. Press "Power" to turn the TV on.
7. Next, press "RCU Setup" to store the code for your device. The mode key blinks twice. Your remote control is now programmed to operate your TV set.
8. To search codes for other devices repeat steps 1 through 7, but substitute the "TV" key with the appropriate one for the mode you are searching for.

Finding your code: If you want to know what code operates your device, you can obtain it with the Device Code option. To find out the code, follow these instructions:

1. Switch on your device. Then press appropriate mode key, for example "TV" if you want to set up the TV.
2. Press and hold "RCU Setup" until the mode key blinks twice.
3. Press "990". The mode key blinks twice.
4. For the first digit of your code, press "1" and count the number of times the key blinks (e.g. 2 blinks = 2). If the light does not blink, the digit is "0". For the second digit press "2" and count the number of blinks. Do the same for the remaining digits.
5. To check for other device codes, repeat the above steps, but substitute the "TV" key with the appropriate one for the device you are checking.

Using Learning: Your remote control includes a learning feature. It means you can transfer some unique functions from the remote control of other device to this remote control.

1. Press "RCU Setup" until the last selected mode key blinks twice. Then press "975"
2. Press the mode key. For example to transfer a function from DVD remote control press "DVD"
3. Press the key on which the function will be stored.
4. Place your remote control and the device remote control (e.g. your DVD remote control) head-to-head, about 2 inches/5 centimeters apart.
5. On the device remote, press and hold the key to be learned. The target remote control will blink rapidly and turn off. Keep holding the key on the device remote control until the device key on the target remote control blinks twice.
6. If the learning failed, the device key emits one long blink. You will have to repeat step 5.

Deleting a Single Learning Key: Once you used a particular key to store a function on it, you may restore the original function of the key.

1. Press the "RCU Setup" until the last selected mode key blinks twice. Then press "976"/
2. Press the mode key (for example "DVD"). The mode key blinks twice.
3. Press the key containing the learned function. The mode key blinks twice.
4. Press and hold the "RCU Setup" to exit programming.

Deleting All Learned Keys:

1. Press "RCU Setup" until the last selected mode key blinks twice. Then press "976"
2. Press the mode key twice (for example "DVD"). All the learned keys for this mode will be cleared. The mode will be cleared. The mode key blinks twice.
3. Press and hold "RCU Setup" to exit programming.

Using the Master Power Key: Your remote has a feature that enables you to sequentially turn up to five devices on and off with a single key press. This functionality works only if the remote control is in STB mode.

1. Press the "RCU Setup" until the last selected mode key blinks twice.
2. Press "995". The last selected mode key will blink twice.
3. Press "Power".
4. Press the mode key for the device you would like to turn on first and press "Power". Then press the mode key for the second device to turn on and once again "Power". Repeat the steps until adding all the devices you want to be operated.
5. To save settings press "STB".
6. Next press "RCU Setup" to exit programming.

Volume Lock: The remote control enables you to control volume level of different devices without selecting the mode key for each device. For example: if you are watching a film on your DVD player, you can adjust the volume for your TV set, without pressing the TV mode key on your remote control.

To set the Volume Lock for your TV:

1. Press and hold "RCU Setup" until the last selected mode key blinks twice.
2. Press "993". The last selected mode key will blink twice.
3. Then press "TV" and the device key blinks twice.

Deleting "Volume Lock" for a particular device (for example for DVD)



1. Press "DVD" once
2. Press and hold down the "RCU Setup" key until the mode key blinks twice.
3. Press "993". The mode key blinks twice.
4. Then press the "Vol -" key and the mode key will blink four times.=

Now being in DVD mode, you will be able to control Vol +/- or MUTE functions of your DVD only (provided it has volume control).

Deleting "Volume Lock" for all devices

1. Press and hold "RCU Setup" until the last selected mode key blinks twice.
2. Press "993"
3. Press the "+ Vol" key and the last selected mode key will blink four times.

Clearing Custom Programming: You may clear the custom programming and revert to the default settings of the remote control. To do that, follow these steps:

1. Press "RCU Setup" until the last selected mode key blinks twice.
2. Enter "980". The last selected mode key blinks twice, pauses, and blinks twice again.

This procedure does not affect your setup codes. They remain in memory of the remote control.

Introducing PVR

PVR, or Digital Video Recording, allows you to record programs digitally without the need for tapes or discs, as well as pause live TV.

Note: If your set top box does not support PVR, please contact your service provider for an upgrade

Quick Record with PVR

The fastest and easiest way to begin recording using PVR is to use the Record button on your remote control.

Step 1: Start Recording

While watching a program, press Record. Your set top box will immediately begin recording, and the Info Bar will appear with a red Record icon to the right. Once recording has started, a PVR icon will replace the Record icon on the Info Bar, indicating you are now watching a program recorded to PVR (even though it may still be recording). You can also start a quick record in Guide. Highlight a program you want to record using the direction buttons and press Record. If the program is currently on, recording will begin immediately. If the program comes on in the future, a recording event is scheduled and your set top box will record the program for you automatically. Your TV can even be turned off and recording will take place (but your set top box must stay on).

Pause Live TV (PLT)

PVR also allows you to pause live TV (PLT), meaning a program that you are already watching. This can allow you to walk away from your TV and then return without missing anything. You can fast forward from the point where you paused to the point where you catch up with live TV. While watching a channel, PLT will temporarily store what you have watched so you can rewind to when you started watching that channel. If you change channels, it will clear the temporary storage and start to do the same for the new channel. The PLT Playback Controller appears whenever you pause, rewind or fast forward live TV. The center area displays a green bar to indicate the amount of TV you can rewind or fast forward through.

The green arrows show where you are within that range. The far left box indicates the current playback function (pause, play, etc.). The far right box indicates the current time.

Controlling PVR and Live TV

While watching a recorded program or live TV, you can use the Playback Control buttons to pause, rewind, fast forward or stop playback. Press Pause to halt playback at the current point. Press Rewind or Fast Fwd to reverse or advance playback from the current point. Each time you press Rewind, the rewind speed accelerates from 4x - 15x - 60x - 300x (normal Play speed is 1x). Press Play to resume watching at normal speed. Press Stop to exit playback of the program.

PVR Playback Controller

Any time you press one of the Playback Control buttons while watching a recorded program, the PVR playback controller is displayed. The box to the left indicates the playback function in use. The bar in the middle gives a visual representation of where you are in the recording. The lighter section indicates how much of the recording has been played.

The PVR Menu

The PVR item on the MenuBar provides access to previously recorded programs, recording events you have set, schedule an event, view your recording history and delete your recording history.

Accessing the PVR

Go To PVR

Press Menu, highlight PVR and press OK.

The PVR Menu Quick Reference

Recordings

Lists programs you have already recorded. Go here to watch, lock or delete these recorded programs.

To Record

Lists all Recording events you have scheduled, and allows you to cancel any future recording events.

Schedule Event

Allows you to create a recording, reminder or auto tune event for individual or recurring programs.

Record History

Is a log of when recordings start, complete or are cancelled.

Delete History

Logs any deleted recording(s).

Access to PVR Recordings

Highlight Recordings and press OK. A list of your recorded programs will appear to the right. Recordings are listed from newest at the top to oldest at the bottom. Along with the program name, the length of the recording in minutes and the date the recording is made are listed. Any program still being recorded is listed with a red dot icon to the right of the recording date.

How to watch a PVR-recorded Program

Step 1: Pick a Recording

Highlight the recording you want to watch and press OK.

Step 2: Play the Recording

Highlight and press OK.

Step 3: Watch the Recording

You will exit the PVR menu and your recording will begin playing. The Info Bar will appear for a few seconds with a green PVR icon to the right to indicate you are playing a PVR recording. While watching your recording, you can use any of the PVR Control buttons on your remote just as you would if watching a videotape or DVD.

Step 4: Return to Live TV

When the recording ends, you will be returned to live TV. If you want to return to live TV before your recording has ended, press Stop.

Lock or Unlock a Recording

Locking a recording prevents the system from deleting a program to make space for new recordings.

Note: You can still manually delete a locked recording. Locking only prevents the system from automatically deleting it. When manually deleting a locked program, you will be asked to confirm the deletion.

Step 1: Pick a Recording

Highlight the recording you want to lock and press OK.

Step 2a: Lock the Recording

Highlight and press OK. Once a program is locked, a padlock icon appears to the right of the recording date.

Step 2b: Unlock The Recording

If you select a locked program in Step 1, the Lock option will instead be Unlock. Highlight and press OK. When the program is unlocked, the padlock icon is removed.

Deleting a Recording

Step 1: Pick A Recording

Highlight the recording you want to delete and press OK.

Step 2: Delete The Recording

Highlight and press OK.

Step 3: Confirm Delete

Highlight Yes and press OK to confirm, or No if you change your mind.

Step 4: Recording Deleted

Once you confirm the deletion, the entry for that recording is removed from the list. Note: Once a recording has been deleted, there is no way to get it back. Please take care when deleting recordings.

Review Recording Events

You can easily review and cancel future recording events from To Record.

Go to a Recording Events

Highlight To Record and press OK. A list of your scheduled future recording events will appear to the right. Recording events are listed from newest at the top to oldest at the bottom. Each recording event history lists the channel on which the program is shown, the name of the program, and the date and time it airs. If the recording event is a multi-recording, stacked red dot icons are shown to the right of the program date and time.

Cancel a Recording Event

Step 1: Pick A Recording Event

Highlight the recording event you want to cancel and press OK.

Step 2: Cancel The Recording Event

Highlight and press OK.

Step 3: Recording Canceled

Once you have cancelled the recording event, the entry for that recording event is removed from the list.

Schedule a Recording (or other) Event

You can schedule a recording, reminder or auto tune event from the PVR menu in almost exactly the same way as you would when choosing Schedule Event from Guide. The only difference when doing so from the PVR menu is that no information about the event is entered for you.

Go to a Scheduled Event

Highlight Schedule Event and press OK.

Schedule a Recording, Reminder, or Auto Tune

Once you choose Schedule Event from the PVR menu, the Schedule Event window appears. Highlight the setting you want to change and press OK. Use the up or down direction buttons to change the setting.

Press OK to enter your change.

Your Recording History

Record History is a log of all events related to your recordings, including recording started, recording completed and cancellation of a recording event. Delete History is a log of all recordings that have been deleted.

Go to Record History

Highlight Record History and press OK.

Review Record History

Press the up and down direction buttons on the remote to scroll through your record history.

Go to Delete History

Highlight Delete History and press OK.

Review Delete History

Press the up and down direction buttons on the remote to scroll through your deletion history.

0817
Kontakt 0487
Korpel 0037 0556
Korting 0087 0421 0370 0320
Kosmos 0037 0556
Kotron 0412 0264
Koyoda 0009
Kraking 0238
Kriesler 0012
KTV 0030 0180 0217 0185 0280
Kuaile 0009 0264 0412
Kuba 0349 0163
Kuba Electronic 0303 0349 0163
Kulun 0009
Kunlun 0051 0208 0226 0264 0374 0661 0817
Kyoshu 0412 0418 0264 0032
Kyoto 0385 0032 0163 0216 0217

L

L&S Electronic 0865
LaSAT 0486 0370
Leader 0009
Lecson 0037 0556
Legend 0009
Lemair 0411 0032
Lenco 0037 0721 0009 0163 0374 0556 0104
Lenoir 0009
Lesa 0247
Levis Austria 0037 0556
Leyco 0037 0264 0072 0556 0294 0579
LG 0037 0056 0442 0001 0370 1178 0002 0009 0377 0032 0556
0003 0217 0019 0030 0714 0038 0216 0431 0290 0163 0644
0060 0178 0108 0606 0109 0700 1934 1926 0698 0715 0823
Liesenk & Tter 0037 0327 0556
Liesenkotter 0037 0327 0328 0012 0556
Lifetec 0037 0009 0519 0374 0668 0512 0655 1037 1137
0556 0218 0264 1668 0683
Lihua 0817
Lloyd,Äcs 0001 0009
Lloytron 0032
LME 0431
Loewe 0512 0633 0790 0037 0556 0655 0370 0087 0292 0362
0516
Logik 0001 0011 0016 0033 0060 0698 0773 0009 0193 0264
0371
Logix 0668 1668
Longjiang 0264 0412 0817
Luma 0037 0363 0206 0305 0163 0411 0556 0374 0009 0362
0259
Lumatron 0363 0206 0305 0037 0556 0362 0163 0259 0361
0217 0264 0073
Lux May 0037 0009 0556 0581
Luxman 0056 0579
Luxor 0194 0356 0361 0290 0363 0480 0492 0349 0208 0548
0163 0346 0473 0179 1037 0217 0631
LXI 0047 0054 1347 0154 0156 0178 0747

M

M&S 0054
Madison 0037 0556
Magnadyne 0087 0102 0247 0516 0544 0163
Magnafon 0102 0516 0216 0073
Magnavox 0020 0037 0054 0024 0556 0028 0030 0036 0179
0196 0187 0386 0706 0780 1454
Magnum 0648 0714 0037 0556 0715
Majestic 0016
Mandor 0264
Manesth 0037 0217 0235 0556 0264 0320 0035 0294 0163 0363
Manhattan 0037 0556 0668 1037 0163 0778 1668
Marantz 0030 0037 0054 0556 0412 1154
Marelli 0087
Mark 0037 0556 0217 0216 0374 0009 0714 0715
Master,Äcs 0499
Masuda 0218 0371 0009 0264 0037 0217 0556
Materin 0858
Matsui 0009 0037 0011 0556 0035 0487 0036 0235 0072 0177
0208 0355 0217 0033 0272 0354 0371 0294 0443 0433 0516
0544 0579 0363 0455 0163 0349 0431 0045 0195 0191 0335
0714 1908 1037 0629
Matsushita 0250 0650
Matsuyama 0587
Maxam 0264
Maxdorf 0773
MCE 0009
Mediator 0012 0037 0556
Medion 0037 0668 1037 0519 1668 0512 0556 1137 0698 0808
1908 1437 1900
Megapower 0700
Megas 0610
Megatron 0003 0145 0178
MEI 0185 1037 0037 0556
Meile 0264 0412 0817 0848 1910
Meletronic 0009 0346 0037 0068 0512 0104 0109 0343 0163
0247 0105 0217 0287 0374 0480 0492 0216 0411 0349 0556
0634 0361 0191 0195 0661
Melvox 0400
Memorex 0009 0016 0056 1920 0154 0150 0178 0179 1037 0250
0060 1924

Memphis 0337 0072 0009 0385
Mercury 0001 0037 0009 0556 0329
Mermaid 0037
Merritt 0548 0361 0163
Metronic 0625
Metz 0195 0535 0447 0554 0191 0367 0388 0746 0037 0087
0556 0275 0587 0668 1037 1668
MGA 0019 0030 0150 0178 0037 0556 0218 0104
Micromaxx 0037 0556 0668 1037 0630 0808 1668
Microstar 0808
Midland 0017 0032 0047 0051 0135 0747
Minato 0037 0556
Minerva 0070 0487 0535 0195 0554 0191 0516 0108 0150
Minoka 0412 0037 0556 0359
Minutz 0021
Mirror 1900
Mistral Electronics 0193
Mitsubishi 0019 0108 0150 0093 0512 0037 0178 0354 0381
0250 0087 0236 0033 0036 0179 0180 0154 0056 0193 0535
0030 0556 0208 1934 1037 0817 1917
Mitsuri General 0163
Mivar 0216 0292 0290 0516 0291 0370 0609 0217
Monaco 0009
Monivision 0700 0843
Morgan,Äcs 0037 0556
Motorola 0093
MTC 0019 0030 0060 0370 0056 0349 0512 0163 0216 0361
0448
MTEC 0272 0032
MTLogic 0714
Mudan 0009 0051 0208 0226 0264 0412 0817
Multibroadcast 0193
Multistandard 0102
Multitec 0037 0556 0486 0668 1037 1668
Multitech 0009 0180 0349 0102 0363 0216 0486 0037 0217 0370
0556 0247 0264
Murphy 0104 0216 0072 0163
Musikland 0037 0218 0247 0556
Myriad 0556 0037

N

NAD 0156 0166 0178 0361 0866 0163
Naiko 0037 0606 0556
Nakimura 0374 0037 0556
Nanbao 0009 0264 0412 0848 1910
Nansheng 0264 0412 0817
Naonis 0363 0163
NAT 0226 0340 0214
National 0214 0226 0051 0208 0227 0340 0508
NEC 0170 0587 1170 0178 1270 0009 0036 0019 0320 0030
0046 0051 0056 0150 0455 0154 0497 0156 0374 0381 0186
0217 0037 0185 0556 0011 0053 0264 0704 0412 0603 0508
0817 0499 1704 0661
Neckermann 0037 0191 0554 0370 0556 1505 1010 0200 0163
0327 0418 0349 0087 0247 0217 0411 0320 0363 0512
NEI 0037 0337 0556 0431 0371 0163
Nesco 0179 0247 1908
Netsat 0037 0556
Network 0032 0337
Neufunk 0037 0009 0556 0610 0218 0282 0714
New Tech 0037 0009 0556 0343 0217 0448
New World 0218
Newave 0009 0721 0178 0150 0093 0092
Nicom 0544
Nicomagic 0216
Nikkai 0032 0072 0035 0218 0037 0556 0216 0217 0264 0337
0009 0036
Nikko 0030 0092 0178
Nikon 0848 1910
Nishi 0482
Noblex 0154 0430
Nobilko 0102 0070 0216
Nogamatic 0399 0501 0109 0196
Nokia 0361 0163 0473 0480 0349 0548 0606 0492 0631 0359
0339 0208 0374 0346 0179 0320 0567 0610 0109 1912
Norcent 0748
Nordic 0217
Nordmende 0109 0714 0287 0501 0343 0399 0560 0196 0198
0195 0037 0556 0335 0163 0471
Norfolk 0163
Normerel 0037 0556
Noshi 0018
Novak 0012 0037 0556
Novatronic 0037 0105 0374 0531 0556
NTC 0092
NU-TEC 0455 0698
Nurnberg 0163 0361

O

Oceanic 0163 0361 0567 0400 0294 0208 0563 0473 0548 0480
Odeon 0264
Okano 0370 0037 0556 0264 0072 0009
Omega 0264
Omni 0780 0698 0826
Onking 0280

Onwa 0180 0371 0602 0218 0433 0581 0102 0431
Opera 0037 0556
Optimus 0154 0250 0166 0650 1924
Optonica 0093 0165
Orbit 0037 0556
Orion 0037 0179 0177 0236 0355 0463 0556 0235 0655 0714
0320 0321 0443 0294 0011 0516 0009 0544 0364 0102 0264
0412 0531 1916 1908 0033 1905
Orline 0037 0218 0556
Ormond 0385 0668 1037 0037 0556 1668
Orsowe 0516
Osaki 0032 0072 0218 0217 0264 0412 0493 0037 0272 0374
0355 0556
Osio 0037 0556 0290
Oso 0218
Osune 0032 0157 0072 0036 0218 0037 0556
Otto Versand 0036 1505 0037 0217 1010 0320 0343 0093 0512
0535 0554 0556 0195 0544 0349 0191 0361 0235 0109 0294
0226 0247 0303 0009 0282 0428 0431 0516 0519

P

Pace 1908
Pacific 0037 0556 1137 0714 1037 0443
Pael 0216
Palladium 0370 0418 0037 0191 1505 1010 0200 0554 0556
0247 0327 0349 0087 0163 0217 0411 0655 0519 0363 0630
0714 1137
Palsonic 0264 0284 0412 0773 0037 0779 0217 0377 0218 0698
0556 0448 0001 0418
Panama 0009 0217 0264 0216 0037 0556 0247
Panashiba 0001
Panasonic 0051 0650 0226 0108 0250 1924 0054 0037 0214 0556
0163 0208 0361 0227 0367 0508 0340 0516 0548 1210 1310 1930
0001 0853 1941 1946
Panavision 0037 0411 0556
Panda 0009 0780 0051 0208 0226 0826 0264 0706 0412 0508
0698 0817 0821 0848 1910
Pathe Marconi 0501 0109 0196 0198 0399
Pausa 0009
Penney 0002 0135 0003 0018 0747 0019 0021 0027 0030 0047
0032 0051 0060 0156 0178
Perdio 0320 0072 0163 0037 0216 0282 0556
Perfekt 0037 0556
Pershin 0400
Phase 0032
Philco 0054 0087 0463 0774 0020 0074 0028 0418 0747 0145
0628 0019 0030 0056 0247 0037 0556 0163 0370 0032 0180
0186 0178 0519 0481
Philix 0193 0163
Philharmonic 0217
Philips 0037 0054 0556 0056 0238 0012 0721 0000 0554 0019
0191 0020 0087 0774 0193 0747 0423 0187 0186 0343 0178 0108
0570 0024 0374 0028 0030 0092 0032 0051 0772 0009 0200
1154 1454 0080 1756
Phoenix 0037 0556 0370 0486 0163 0087 0072 0216 0320 0385
Phonola 0012 0037 0556 0087 0193 0216 0080
Pilot 0109 0556 0030 0037 0712 0706
Pioneer 0038 0166 0866 0011 0037 0109 0170 0556 0163 0423
0428 0679 0287 0370 0343 0361 0486 0512 0760
Pionier 0370 0486
Plantron 0037 0556 0264 0009
Playsonic 0714 0037 0217 0339 0715
Policom 0102 0109 0196 0198 0206 0238 0275 0361 0163 0070
0074 0087 0501 0535
Polytron 0697 0282
Poppy 0009
Portland 0019 0092 0374 1909
Powerpoint 0487 0037 0556 0698
Prandoni-Prince 0247 0516 0361 0363
Precision 0217
Premier 0009 0264
Prima 0032 0817 0009 0264 0303 0068 0412
Princess 0698
Princeton 0700
Prinston 1037
Prinz 0072 0544 0349 0361 0194
Prism 0051
Profex 0009 0163 0361 0431 0363
Profii 0009
Profftronic 0037 0556 0102
Proline 0037 0321 0556 0625 0634 0630 0411 0012 0072 0621
Proscan 0047 0747 1347 0030 1922
Proscop 0156
Prosonic 0037 0556 0370 0374 0371 0668 0714 0451 0216 0214
0579 0217 1668
Protech 0009 0037 0556 0102 0217 0247 0264 0349 0337 0418
0431 0668 1668 0282 0163 0486 1037
Proton 0001 0178 0466 0003 0009 0052 0644 0030
Provision 0499 0037 0556 1037 0714
Pulsar 0017 0019
Pye 0012 0037 0556 0087 0554 0374 0349 0412
Pymi 0009

Q

Qingdao 0051 0208 0226 0264 0412 0817
Quadra Vision 0400
Quadral 0218
Quasar 0051 0247 0650 0165 0250 0009 0865 1924



Transtec 0216
Triad 0037 0556 0218
Trical 0157
Trident 0516 0217
Tristar 0264 0218 0193
Triumph 0177 0243 0516 0346 0556 0037
Tsooschi 0282
Tuntex 0009 0030 0092
TVTEXT 95 0556

U

Uher 0320 0037 0556 0206 0303 0374 0418 0486 0370 0259
0480
Ultra 0192
Ultravox 0087 0102 0374 0247 0216 0163 0037 0556
Unic Line 0037 0556 0473 0455 0349
Unifed 0037 0556 0714 0715
Universal 0027 0037 0556
Universum 0037 0346 0074 0105 0104 0535 0195 0264 0370
0473 0361 0247 0492 0480 0200 0418 0011 0146 0512 0294
0036 0157 0032 0070 0163 0556 0421 0411 0290 0327 0328
1505 1010 0668 0544 0349 0217 0501 0109 0362 0337 0177 0631
0554 0009 1901 1037 1437 0170 1668
Univox 0037 0556 0337 0087 0163 0238
Utax 0163

V

V7Videoseven 1755
Vector Research 0030
Vestel 0037 0163 0217 0556 0668 1037 1668
Vexa 0009 0037 0556
Vibrant 0272
Victor 0053 0653 0036 0250 0650
Videocon 0508
Videologic 0218 0216
Videologique 0216 0218 0217
Videosat 0247
VideoSystem 0037 0556
Videotechnic 0216 0217 0320 0374
Videoton 0356 0163 0431
Vidikron 0054 0102
Vidtech 0019 0036 0178
Viking 0046
Viper 0337
Visioli 0216
Vision 0032 0037 0320 0264 0556 0217
Vistar 0206 0361 0567
Vortec 0037 0556
Voxson 0087 0163 0178 0037 0556 0363 0418

W

Waltham 0217 0356 0418 0287 0385 0037 0556 0668 0109 1037
0431 1668
Wards 0016 0165 0019 0179 0020 0021 0027 0028 0030 0054
0056 0178 0866 1156
Warumaia 0374 0661
Watson 0037 0320 0556 0163 0218 0305 0579 0519 0394 0009
0668 1037 1908 1437 1668
Watt Radio 0102 0544 0349 0163 0216
Waycon 0156
Wega 0036 0037 0556 0087
Wegavox 0009 0037 0556
Weipai 0009
Welltech 0714
Weltblick 0037 0556 0320 0217
Welttech 0284
Weston 0037 0556
Wharfedale 0037 0861 0519 0556
White Westinghouse 0037 0320 0186 0216 0556 0337 0623
1909
Windsor 0668 1037 1668
Windstar 0282 0337
Windy Sam 0556
Wintel 0714
Worldview 0455

X

Xenius 0634 0661
Xiahua 0009 0264 0412 0698 0773 0779 0817
Xianghai 0009
Xiangyang 0264 0412
Xihu 0264 0412 0817
Xinaghai 0412
Xingfu 0009
Xinghai 0264
Xingyu 0009
Xinrison 0848 1910
Xinsida 0329
XLogic 0698 0860
Xrypton 0037 0556
Xuelian 0848 1910

Y

Yamaha 0019 0650 0839 0030
Yamishi 0282 0455 0218 0037 0556 0217
Yapshe 0250
Yingge 0009
Yokan 0037 0556
Yoko 0037 0217 0264 0556 0218 0009 0431 0421 0370 0305
0339 0216 0247
Yongbao 0848 1910
Yonggu 0009
Yorx 0218
Youlanasi 0817
Yousida 0009 0848 1910
Yuhang 0009

Z

Zanela 0238
Zanussi 0206 0305 0363 0217
Zenith 0016 0017 0092 0178 1909
Zenor 0339
Zhuhai 0009 0374
Zonda 0003 0698 0779
ZX 0284 1908

VCR SETUP CODES

A

Adyson 0072
Aim 0278 0642
Aiwa 0307 0000 0348 0352 0037 0687 0742 0041 0680 0032
Akai 0037 0106 0315 0642 0041 0020 0352 0240 0348
Akashi 0072
Akiba 0072
Akura 0271 0072 0041
Alba 0278 0072 0352 0020 0000 0315 0348 0081
Allorgan 0240
Allstar 0081
Ambassador 0020
Amstrad 0000 1942 0278 0072
Anitech 0072
Ansonic 0000
Aristona 0081
ASA 0037 0081
Asuka 0072 0037 0081 0000 0038
Audioasonic 0278
Audioton 0020
AVP 0352 0000
AWA 0037 0278 0642 0043

B

Baird 0106 0278 0104 0041 0000
Bang & Olufsen 0499
Basic Line 0278 0020 0072 0046 0104
Baysonic 0294
Beko 0104
Bestar 0278 0020
Black Diamond 0642 0278
Black Panther 0278
Blaupunkt 1562 0226 0162 1062 0081
Blue Sky 0037 0348 0072 0352 0278 0000 0480 0642
Bondstec 0020 0072
Brant 0041 0320 0321
Brant Electronic 0041
Brinkmann 0348
Broksonic 0121 0294
Bush 0072 0278 0315 0352 0000 0348 0081 0642 0742

C

Carena 0081
Carrefour 0045
Casio 0000
Cathay 0278
Catron 0020
CGE 0041 0000
Cimline 0072
Clatronic 0020 0072 0000
Comag 2009
Combitech 0352
Condor 0020 0278
Crown 0037 0278 0072 0480 0020 0271
Cyrus 0081

D

Daewoo 0278 0642 0844 0348 0352 0045 0020
Dansai 0072 0278
Dantax 0352
Daytron 0278
de Graaf 0042 0166 0081 0104 0048 0046
Decca 0000 0041 0081 0067 0348 0352
Deitron 0278
Denko 0072
Diamant 0037

Dream Multimedia 1968
DSE 0642
Dual 0041 0081 0278 0000 0348
Dumont 0000 0081 0104

E

Echostar 1961
Elbe 0278 0038
Elcotech 0072
Elin 0240
Elsay 0072
Elta 0072 0278
Emerson 0072 0045 0294 0000
ESC 0278 0240 0020
Etzuko 0072
Europhon 0020

F

Fast 0897
Fenner 0020
Ferguson 0041 0320 0321 0000 0278
Fidelity 0000 0072 0240 0432 0352
Finlandia 0104 0081 0042 0166 0000 0048 0384 0037 0043
0046 0106 0226
Finlux 0000 0081 0104 0042
Firstline 0072 0348 0043 0037 0045 0042 0278
Fisher 0047 0104 0046 0038 0020
Flint 0348
Force 1963
Frontech 0020 0072
Fujitsu 0000
Fujitsu General 0037
Funai 0000 1593

G

Galaxi 0000
Galaxis 0278
GBC 0020
GbSAT 1947
GE 0320
GEC 0081
Gecco 2009
General 0020
General Technic 0348
Genexxa 0104
Goldhand 0072
GoldStar 0037 1237 0480 0000 0225
Goodmans 0000 0072 0240 0278 0037 0020 0081 0348 0352
0642
GPX 0037
Graetz 0041 0104 0240
Granada 0104 0046 0048 0081 0240 0037 0226 0042 0000 1062
Grandin 0072 0037 0020 0000 0278
Grundig 0081 0347 0226 0320 0348 0072 1062 0352 0742 1948

H

Haaz 0348
Hanimex 0352
Hanseatic 0037 0278 0081 0038
Hantor 0020
Harwood 0072
Hauppauge 1992
HCM 0072
HDT 1951
Hewlett Packard 1972
Hinari 0072 0352 0041 0278 0240
Hisawa 0352
Hischito 0045
Hitachi 0042 0166 0041 0000 0240 0081 0104 0384 0593
Höher 0278 0642
Hornlyphon 0081
Humax 2004
Hypson 0072 0278 0352 0000 0037 0480
Hyundai 1950 1951

I

Impego 0020
Imperial 0000 0240
Ingersoll 0240
Inno Hit 0020 0240 0278 0072
Interbuy 0037 0072
Interfunk 0081 0104
Internal 0278
International 0278 0037
Intervision 0000 0278 0037 0348
Irradio 0072 0037 0081
ITT 0106 0041 0046 0384 0104 0240
ITT Nokia 0048
ITV 0278 0037 0020

J



JMB 0352 0348
Joyce 0000
JVC 0041 0067 0384

K

Kaisui 0072
Kambrook 0037
Karcher 0278
Kathrein 1952 1953
Kendo 0106 0315 0348 0072 0037 0278
Kenwood 0041 0038 0046
KIC 0000
Kimari 0047
Kneissel 0352 0348 0037 0278
Kolster 0348
Korpel 0072
Kuba 0047
Kuba Electronic 0047
Kuwa 0226 1062
Kyoto 0072

L

Lenco 0278
Leyco 0072
LG 0037 0225 1237 0480 0000 0278
Lifetec 0348
Loewe 0081 1562 1062 0162 0226 0037
Logik 0240 0072 0106
Lumatron 0278 0593
Lux May 0072
Luxor 0106 0046 0043 0072 0104 0047 0048 0315

M

Magnavox 0081 0642
Magnum 0642
Manesth 0072 0045 0081
Marantz 0081 0038
Mark 0278 0020 0000
Mastec 0642
Master.Acs 0278
Matsui 0348 0037 0240 0352 0000 0687 0742
Mediator 0081
Medion 0348 0352 2009
Melectronic 0000 0037 0038
Memorex 0104 0000 0046 0037 0048 0047
Memphis 0072
Mercury 0020
Metronic 0081
Metz 1562 1062 0162 0226 0347 0081 0037 0836 0837
Micormay 0348
Micromaxx 0348
Microstar 1960
Migros 0000
Mitsubishi 0043 0067 0081 0480 0608 0000 0642
Multitec 0037
Multitech 0000 0072 0020 0104
Murphy 0000
Myryad 0081

N

NAD 0104
Naiko 0642
NAP 0039
National 1562 1062 0226 0162
Nebula Electronics 0033
NEC 0041 0038 0067 0040 0104 0037 0278
Neckermann 0041 0081
Nesco 0072 0000 0352
Neufunk 0037
Nikkai 0020 0072 0278
Nokia 0104 0106 0315 0041 0278 0046 0240 0048 0042 0081
Nordmende 0041 0384 0320 0321 0494 0067
NU-TEC 0348

O

Oceanic 0000 0048 0106 0081 0104 0041 0046
Okano 0315 0348 0072 0278
Onimax 0642
Opentel 2009
Orbit 0072
Orion 0294 0352 0121 0348 0742
Orson 0000
Osaki 0000 0037 0072
Osume 0072
Otto Versand 0081

P

Pace 0352 1942 1973
Pacific 0000
Palladium 0072 0315 0037 0041 0240 0348 0432
Palsonic 0072 0000 0642

Panasonic 1562 1662 1062 0162 0226 0836 0837 0225 1941
Pathe Cinema 0043
Pathe Marconi 0041
Perdio 0000
Philco 0038 0072
Philips 0081 1081 1181 0563 0384 0593
Phoenix 0278 1959
Phonola 0081
Pilotime 1971
Pioneer 0067 0081 0042 0162
Portland 0020 0278
Prinz 0000
Profrontronic 0081 0240
Proline 0000 0278 0320 0642 0321
Prosco 0278
Prosonic 0278 0000
Protech 0081 0278
Provision 0278
Pye 0081 0000

Q

Quasar 0278
Quelle 0081

R

Radiolva 0037 0072 0081 0048
Radiola 0081
Radionette 0037
Rank 0041
Rank Arena 0041
RCA 0320
Rebox 1947
Reoc 0348 0278
Rex 0041 0384
RFT 0020 0072
Roadstar 0240 0072 0037 0278 0742 0081
Royal 0072

S

Saba 0041 0320 0321 0384 0494 0278
Sagem 1955
Saiho 0348
Salora 0046 0043 0106 0104
Samsung 0240 0432 0620 1959
Samurai 0020
Sansui 0041 0067 0271 0106 0072 0348
Sanyo 0104 0046 0047 0048 0067
Sat Control 1966
Saville 0352 0278 0240
SBR 0081
ScanSonic 0240
Schaub Lorenz 0041 0104 0000 0106 0315
Schneider 0072 0000 0037 0081 0278 0240 0042 0897 1959
0352 0642
Scott 0294
Seaway 0278
SEG 0072 0240 0278 0642 0081 0561
SEI 0081
Sei-Sinudyne 0081
Seleco 0041 0384 0020 0037
Sentra 0072 0020
Setron 0072
Sharp 0048 0037 0569
Shintom 0072 0104
Shiwaki 0037
Siemens 0037 0104 0081 0320 0347
Siera 0081
Silva 0037
Silver 0278
Singer 0271 0348 0045
Sinudyne 0081 0352
Sky XL 2009
skyplus 2009
Smaragd 0348
Solavox 0020
Sonitron 0047
Sonneclair 0072
Sonoko 0278
Sonolor 0048 0046
Sontec 0037 0278
Sonwa 0642
Sony 0033 0032 0106 1032
Soundwave 0037 0348
Ssangyong 0072
Standard 0278
Starlite 0037 0104
Stern 0278
Strong 0271 1966 1958
Sunkai 0348 0278
Sunstar 0000
Suntronic 0000
Sunwood 0072
Supra 0037 0240 0348
Symphonic 0000 0072

T

T+A 1062 0226 0162
Tandberg 0278
Tashiko 0000 0048 0240 0081 0037
Tatung 0000 0041 0081 0048 0043 0348 0352
Tchibo 0348
TCM 0348
Teac 0072 0041 0000 0278 0642 0037 0081 0307 0526 0781
0593 0844
TEC 0020 0278 0072
Tech Line 0072
Technics 0226
TechniSat 0348
Tedelex 0037 0348 0642
Teleavia 0041
Telefunken 0642 0041 0320 0321 0384 0494 0278
Telestar 0037
Teletch 0072 0278 0000
Tempest 0020
Tenosal 0072
Tensai 0000 0037 0072 0278
Tevion 0348 0642
Textet 0278 0020
Thomson 0320 0722 0321 0041 0067 0384 0494 0278 0060
0202
Thorn 0041 0104 0037
Thorn-Ferguson 0320
Tokai 0072 0037 0041 0104
Tokiwa 0072
Topfield 1959
Topline 0348
Toshiba 0045 0041 0384 0043 0081 0742 0352 1008
Towada 0072
Tradex 0081
Trakton 0020
Tredex 0278
Triad 0278
TVA 0020

U

Uher 0037 0240
Ultravox 0278
Unitech 0240
United 0348
United Quick Star 0278
Universum 0000 0081 0240 0037 0106 0348 0104

V

Victor 0067
Video Pro 0020
Video Technic 0000
VideoPro 0020

W

Watson 0081 0352 0278 0642
Weltblick 0037
Wharfedale 0593 0642
World 0348

Y

Yamaha 0041
Yamishi 0072 0278
Yokan 0072
Yoko 0037 0072 0020 0240
Yoshita 0072

Z

Zehnder 1960 2009
ZX 0348 0352

DVD SETUP CODES

3DLAB 0539

A

A-Trend 0714
Acoustic Solutions 0730
AEG 0788 0770 0790
Afreay 0698
Aim 0699 0778
Aiwa 0641 0695 1912 0869 0533
Akai 0790 0779 0788 0766 0690 0716 0884 0713 0852 0705
1083 1975 1115 1089 1695
Akashi 0838
AKI 0853 0718 0780
Akira 0699 0778
Akura 0898 1051
Alba 0717 0699 0713 0723 0733 0695 0730 0783 0539 0672



1140 1051
Albatros 1100 1001
All-Tel 0790 0712
Amitech 0784 0770 0850
Amoisonic 0764 0835
Amstrad 0713
AMW 0872
Ansonic 0774 0759
Apex Digital 0672 0799 1100 1056
Arcam 0732
Arena 0852
Aria 0893
Arianet 0893
Ariston 0673
Ariston Acoustics 0673
ATD 0718 0881
Audiosonic 0690 1923
Audix 1083 1104
Auvio 0843
AWA 0730 0872
Axion 0730

B

Baier 0752
Bang & Olufsen 1025
Basic Line 0713 1994
Baze 0898 0672
BBK 0862 1084
Bellagio 0872
Belson 1103 1923
Best Buy 0857
Binatone 1923
Black Diamond 0713 0766 0884 0833
Blaupunkt 0717
Blue Parade 0571
Blue Sky 0699 0695 0713 0804 0672 0843 0778 0651 0769
Boghe 1004
Boman 0783 0788
Bosston 0777
Brainwave 0770 1997 1115
Brandt 0651 0551 0503
Britannia 0746
BskyB 1980
Bush 0713 0695 0833 1695 0730 0699 0690 0689 0717 0778
0516 0676 0811 0774 0818 0879 0884 0723 1021 0518

C

C-Tech 0798 0768
Cambridge Audio 0751 0696 1084 1109
Cambridge Soundworks 1916 0696
CAT 0699 0786 0789 0787
CCE 1917
Celestial 0672 1020 1939
Centrex 0672 1004 1915
Centrum 0713 0789 0779 0893 1994 1005
CGV 0733 0770 0751
Cinetec 0713 0872
cineULTRA 0699
CineVision 0876
Classic 0730 1917 1730
Clatronic 0788 0779 0818 0672
Clayton 0713
Coby 0778 1107 0730
Compacks 0826
Conia 0852 0764 0516 0835 0672 1125
Contel 0788
Continental Edison 0872 0774
Crown 0770 0769 0651 0690
Crypto 0882
Cybercom 0774
CyberHome 0714 1019 0816 1117 0874 1023
Cyductin 1074
Cytron 0716 0651 0705 0774

D

D-Vision 1115
Daenyx 0872
Daewoo 0705 0832 0833 0770 0714 1918 0870
0872
Daewoo International 0778 0872 0699
Dalton 0786 1036
Dansai 0770 0747 0783 1115
Dantax 0723 0695
Daytek 0872 1005
Dayton 0872
DCE 0774
DEC 0778 0699 0818
Decca 0770
Denon 0490 0634 1634
Denver 0778 0699 0788 0898 0818 1083 1107
Denzel 0665
Desay 0800
Diamond 0651 0768 0751 0778 0723
Digihome 0713
digiRED 0717
Digital i 0893

Digitor 1005 0690
Digitrex 0672 1915 1100 0795 1056
DiK 0774
Dinamic 0788
DiViDo 0705
DK digital 0774 0840
DL 0853
DMTECH 1097 0783 0790
Dragon 0774
DSE 1730 0833
DTS 0799
Dual 0665 0651 0713 0730 0783 0779 0790 0774
Durabrand 1003 0774
DVX 0518 0768

E

E-Boda 0723
EagleTec 0714
Easy Home 0857
Eclipse 0723 0751
Electrohome 0770 0784
Eifunk 0850
Elin 0770
Ellion 0850
Elita 0690 0770 0788 0790 1115
Eltax 0766 1092 1096 1987
Emerson 0591 0705
Encore 0698
Enzer 0665 0701 0784 0766
EuroLine 0788 1115 1083

F

Ferguson 0651
Finlux 0741 0770 0676 0783 0591 0672 0751
Fintec 0713 0784
Firstline 0799 0869 0651
Fisher 1919
Funai 0695 0675

G

GE 0717
Germatic 1051
Global Solutions 0768
Global Sphere 0768
Go Video 0783 1099
GoldStar 0591 0741
Goodmans 0651 1004 0790 0690 0783 0723 0818 0879 0833
2007 0713 0730
Graetz 0665
Gran Prix 0774
Grandin 0716 0672
Grundig 0695 0775 0539 0651 0705 0790 0701 0713 0670 0686
0723 1695 1004 1730 1920
Grunkel 0770

H

H&B 0818 0713 0841 0850
Haaz 0768 0751
Haier 0843
Hanseatc 0741 0783
Harman/Kardon 0702 0582
Haus 0849 0786
HCM 0788
HDT 0705
HE 0730
Henvü 0713
Himage 0825 0518
HIMAX 0857 0843 1106
Hitachi 0664 0665 0573 0779 1920 0857 1994 0713
Hiteker 0672
Hv/øher 0826 0774
Home Electronics 0730
Hoyo 0743
Hypson 0673
Hyundai 0783 0850 0766

I

Ingelen 0788
ISP 0695

J

JBL 0702 1921 1926 1978
JDB 0730
JDV 1102
Jeken 0699 0778
Jeutech 0777
Jindian 0799
JMB 0695
JNC 0672
JNL 0735
Jocel 0780

JVC 0623 0558 1901 1940 0539 0503 0638 0867
jWIN 1049 1051

K

Karcher 0783
Kendo 0699 0713
Kennex 0770 0840 0713 0898
Kenwood 0534 0490 0737 0682
KeyPlug 0770
Kiro 0718 0770 0780 0853
King DHome 0799
Kingavon 0818
Kiss 0841 0665
Koda 0818
Konka 0711 0719 0720 0721
Koss 0651
Kotron 0851
KXD 0857

L

Labway 0709 0531
Lasonic 0743 0798
Lawson 0705 0716 0768
Lecson 0696 0747
Lenco 0699 0774 0651 0770 0778 0818 0713
Lennox 0819 1938 0690 0838
Lenoxy Sound 1938
Lexia 0699
LG 0591 0741 0571 0801 1906 0869 1983
Lifetec 0651 0774
Limit 0716 0768
LiteOn 1058
Loewe 0539 0741
LogicLab 0768
Logix 0705 0783 1101
Lumatron 0705 0724 1115 1097 0741 0833 0713 0730 0898
Lunatron 0741
Luxman 0573
Luxor 1004 0713 1730 0730

M

Magnavox 0503 0818 0675 1140 0539 0713
Magnox 0723
Malata 0782
Manhattan 0705 0713
Marantz 0539
Mark 0724 0713 0695 1695 0884
Marquant 0770
Mastec 1006
Matsui 0651 0713 0672 0695 0884 1730
Maxdorf 0788
Maxim 0825 0713
MBO 0690 0730
MDS 0699 0778
Mecotek 0770
Mediencom 0746 0853
Medion 0774 0783 0651 0716 0758 0879 0630 2007
MEI 0790
Memorex 0774
Memory 1083 0730 1051
Metz 0571 0525 0713
MiCO 0723 0751
Microboss 0718
Micromaxx 1695 0695
Micromedia 0503 0539
Micromega 0539
Microsoft 0522
Microstar 0774
Minato 0752
Minax 0713
Minerva 0705
Minoka 0770
Minowa 0712
Mirror 0879 0752
Mitsubishi 0713 0521
Mivoc 1998
Mizuda 0818 0857
Momsitu 1082
Monyka 0665
MP 0843
mp man 1019
MPX 0843
Mustek 0730 1917 1730
Mx Onda 0651 1980 0751 0723
Mystral 0774

N

NAD 0704 0741 0692
Naiko 0770 1004
NEC 0869 0692 0591 1918
NeoXeo 0826
Neufunk 0665
Nevir 0770 0774
NextBase 0826
Nikkai 1923

Nintaus 0793 1051
Nordmende 0774
Noriko 0752
Nowa 0843
NU-TEC 0516

O

Okano 0752
Omni 0698 0746 0840 0690 0883 0699 0778 0833 1065
1104 1998
Onix 0838
Onkyo 0627 0503 1612 1924
Optim 0747 0843
Optimus 0571 0525
Orava 0818
Orion 0695 1128 1695 1006
Ortron 0651
OTIC 0826

P

P&B 0818
Pacific 0768 0790 0759 0804 0774 0713
Palladium 0695 0779
Palsonic 0689 0835 0852 0672
Panasonic 0490 1490 0632 1908 1907 1909 1910 1905 1925 1010
1011 1986
Panda 0717 0783
Philips 0539 0646 0885 0503 1914 1911 0675
Phonotrend 0699
Pioneer 0571 0631 1965 0632 0525 0638 1900 1902
Plu2 0850
Pointer 0770 0784
Portland 0690 0770
Powerpoint 0853 0872 0758 0780 0718
Prima 0766
Prima Electronic 0766
Prinz 0774
Prism 1006
Prodisma 0853
Proline 0651 0686 0672 0790 1004 0833 1915
Proscan 0522
Proson 0713 1084
Prosonic 0699 1107 0752 1923
Provision 0699 0818

Q

QONIX 0778

R

Radionette 0741 0869 1906
Raite 0665
Rank Arena 0780 0718
RCA 0522 0769 0651
REC 0689 0766 0490 0746
Red Star 0759 0748 0763 0770 0788 0898 0805 0806
1003 1923
Reoc 0768 0752 0875
Revoy 0699 0841
Rex 0838
Roadstar 0699 0690 0689 0713 0818 0730 1051 0898 0833
Ronin 0872 0710
Rotel 0623 0558
Rowa 0823 0759 1004 1021 0516 0525 0717
Rownsonic 0789 0723

S

Saba 0651 0769 0551
Sabaki 0798 0768
Saivod 0759 0774 0770
Salora 0741
Sampo 0698 0752
Samsung 0573 0744 1932 1928 0820 1075 1936 0490
Sansui 0695 0716 0768 0784 0723 0770 0751 0851 1695
Sanyo 0670 0695 0790 1919 0673 0896
SAST 0806
Scan 0705 0835 0850
ScanMagic 0730 1730
ScanSonic 0857
SCE 0789
Schaub Lorenz 0788 0770
Schneider 0783 0779 0705 0804 0788 0713 0651 0790 0774
1101
Schwaiger 0752
Scientific Labs 0768
Scott 0718 0780 0651 0672 0881 0853 1036
SEG 0665 0713 0768 0798 0884 0872 0763
Shanghai 0672
Sharp 0630 0752 0695
Sherwood 0717 0741 0633 1043
Shinco 0717
Shinsonic 0839
Sigmatek 0857
Silva 0788 0898 0774
Silva Schneider 0774 1983 1906

Simaudio 0885
Singer 0690 0716 0723 0751 0768
Sinotec 0764
Skantic 1003
Sky 1980
Skymaster 0730 0768
Skysonic 0766
Skyworth 0766 0898
Slim Art 0770 0784
Slim Devices 0533
SM Electronic 0730 0768 0690
Smart 0718 0705 0713
SMC 0811
Sogo 0853
Sonai 0755
Sonashi 0716 0774
Sony 0533 1533 1981 1070 1903 1934 1133 1033 0573 1069
1904 1017
Soundmaster 0768
Soundmax 0768
Soundwave 0783
Spectra 0872
Standard 0651 0768 0788 0774
Star Cluster 0768
Star Clusters 0768
Starmedia 0818 0893 0881 1005
Stevison 0676
Strong 0713
Sunfly 0857
Sunkai 0770 0850
Sunwood 0788
Supervision 0730 0768
SVA 0672 0860 1105 0717
Synn 0768

T

Tandberg 0713
Tangent 1987
Targa 0741
Tatung 0770 0771
Teac 0717 0741 0516 0571 0692 0768 0591 0758 0759 1006
0735 0790 1929 1930 1935 0833 1936 1021 1984
TEC 0898
Technica 1097
Technics 0490 1490 1905 1907 1908 1909 1910 1925
Technika 0770 1097 1115 0774
Technosonic 1051 1115
Techwood 0713 0539
Telex 0690
Telefunken 0790 1083 0789 0788
Teletech 0713
Tensai 0690 0651 0770
TerraTec 0825
Tevion 0651 1036 0798 0768 1929 0833
Thakral 0701
Theta Digital 0571
Thomson 0551 0522
Tokai 0665 0898 0698 0788 0784
Tokaido 0698
Tokiwa 0705 0716
Tom-Tec 0789
Tongtel 0764
Toshiba 0503 0758 1045 1988 2006
Trans Continens 0826
TRANS-continents 0872 0826 0774
Transonic 1021 0672
Tredex 0799 0843
Trio 0770
TruVision 0857
Truvox 1102

U

Umax 0531 0690
United 0788 0730 1083 0790 0672 0695 1115 0668
0699 0768
Universal Multimedia 0768
Universum 0741 0713 0591 0779 1918 1913
Uptek 0763

V

Venturer 0790
Vestel 0713 1994
Vieta 0705
Viewmaster 1084 0862
Voxson 0774 0730 0690 1120
VTrek 0882

W

Waitec 1917
Walkvision 0717
Welkin 0774
Wellington 0713
Wesder 0699
Wharfedale 0686 0768 0696 0698 0723 0751 0752
Wilson 0774

Windy Sam 0573
Wintel 0777
Woxter 0881

X

XBox 0522
XLogic 0881 0770 0768 0798
XMS 0788 0689 1689 1188 0770
Xoro 0806 0829 1982 1079
Xwave 0709 0531 1001

Y

Yakumo 1004 1056
Yamada 1004 0872
Yamaha 0539 0646 0817 0490 0668 0545
Yamakawa 0665 0710 0765 0872 1104
Yelo 0718 0780
Yukai 0730 1917

Z

Zenith 0503 0591 0741
Zenix 0849
Zeus 0851 0784